Quick Installation Guide STAR


#### HFLTUUC/200C

## 1. Check Environment

1.1 Check the power source


Before connecting, check the input voltage if it is right as DC12V/150mA.


1.2 Connection Diagram

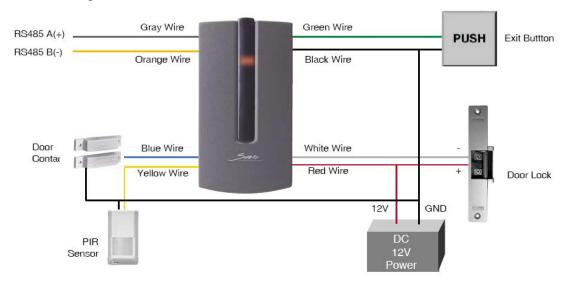


< RFL100C/200C Configuration >


1.3 Lock Control only without event management (Max. 255)

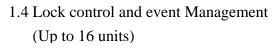

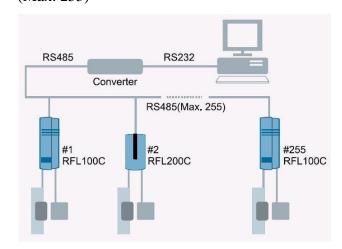

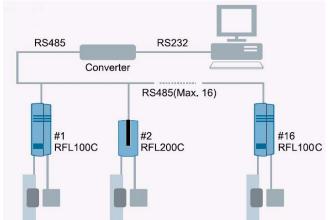


1.5 Interface controller required, Event management and Lock control (Over 16 units)

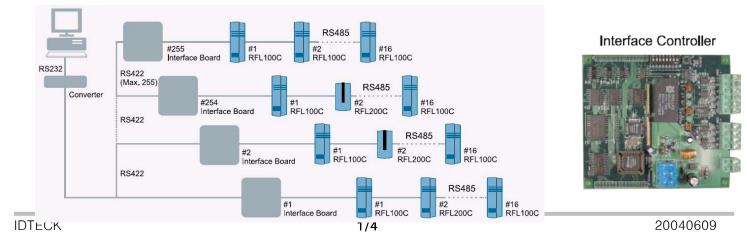


## 2. Setup Hardware


- All the parameter of RFL100C/200C was set-up by Software.
- 2.1 Address Setting
  - -Select and type the name from the keyboard.

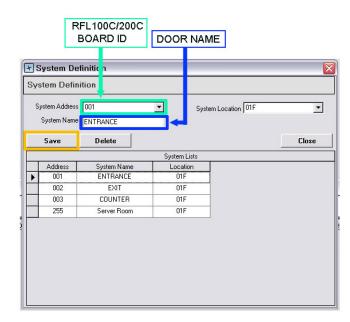


2.2 In/Out point relation definition

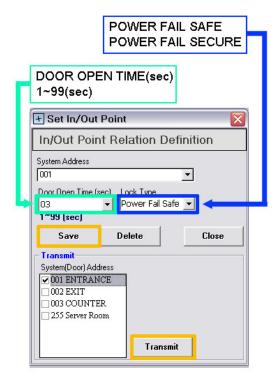

2.3 User registration/deletion Cardholder registration/deletion has been performed by the software.

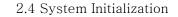

RFL100C/200C initialized by the software.

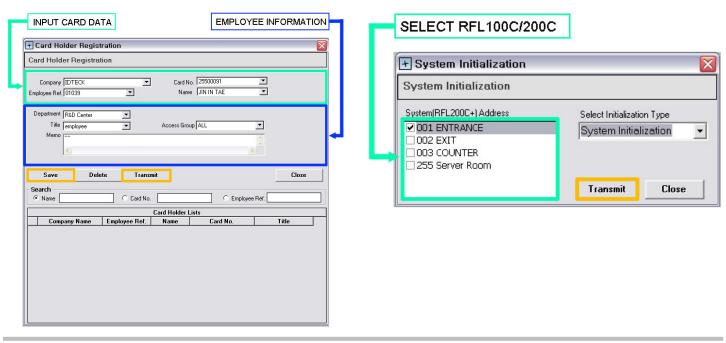

Quick Installation Guide STAR

HFLTUUC/200C

# 4. Normal Operation

## Power on

When the power is applied to RFL100C/200C, Red LED will be light on. The initial beep should sound twice.

## Registered card reading

When a registered card is read, the Door will be opened for 3 seconds (Default) with the Green LED light on.

## **Unregistered card reading**

When an unregistered card is read, the access is denied and the beep sounds twice.

## **Exit Button**

The Exit Button can be used to exit the door.

Press the Exit Button

The Door will be opened for 3 seconds with the Green LED light on.